FR-S / BRZ / GT86 Sound Generator Delete Kit

Install Time: 30 minutes to 1 hour

In the Box:
- (1) 6061-T6 aluminum plug
- (1) Stainless steel clamp
- (1) Solid rubber grommet

Tools:
- Pliers
- 10mm socket
- 5/16 socket
- Socket driver
- Flat head screwdriver

Instructions:
1. Remove OEM intake elbow, and sound tube. Use 5/16 socket to loosen clamps at sound tube. Remove sound tube from engine bay after loosening clamps. (Fig 1)
2. Sound tube removed from engine bay. (Fig 2)
3. Use 10mm socket to remove (2) bolts from Sound Generator assembly. (Fig 3 & 4)
4. Open passenger side door, look below glove compartment where the carpet ends. Pull carpet back to show sound tube entry. Push the center of the grommet (on the plastic piece) to remove the sound tube. (Fig 5 & 6)
5. In the engine bay gently remove the tube from the cabin. Cut this plastic zip tie holding the tube (by battery). Remove plastic zip tie held at bracket. Remove tube from engine bay. (Fig 7)
6. Sound generator assembly removed from engine bay. (Fig 8)
7. Remove rubber grommet from fire wall. (Fig 9 & 10)
8. Install sound generator delete kit. (Fig 11)
9. Install solid rubber grommet in fire wall. Press in and spin to fully seat grommet, it may help to press the grommet in from the engine bay. (Fig 12)
10. Install Aluminum plug into OEM intake elbow. Lightly lubricate plug to ease installation. Hand tighten supplied clamp. (Fig 13)
11. Installation complete!! (Fig 14 & 15)

Now enjoy less cabin noise, and a less complicated engine bay!

© 2016 Racer X Fabrication

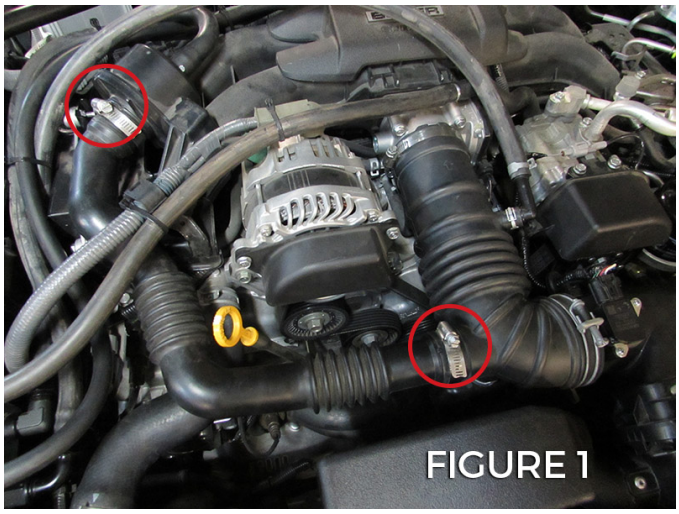

FIGURE 1

FIGURE 2

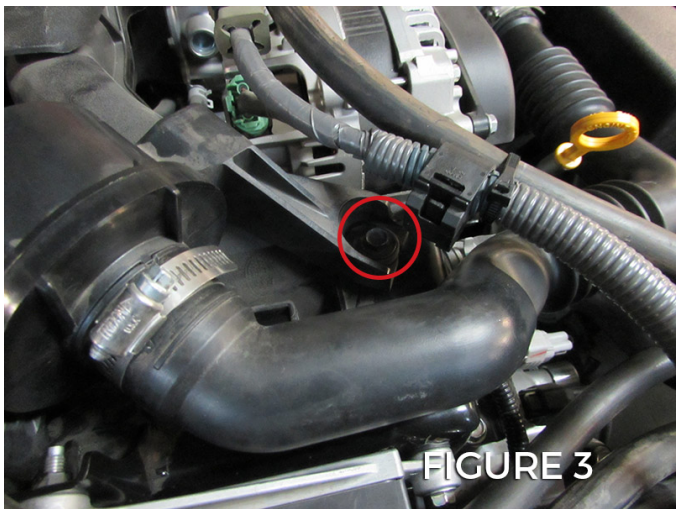

FIGURE 3

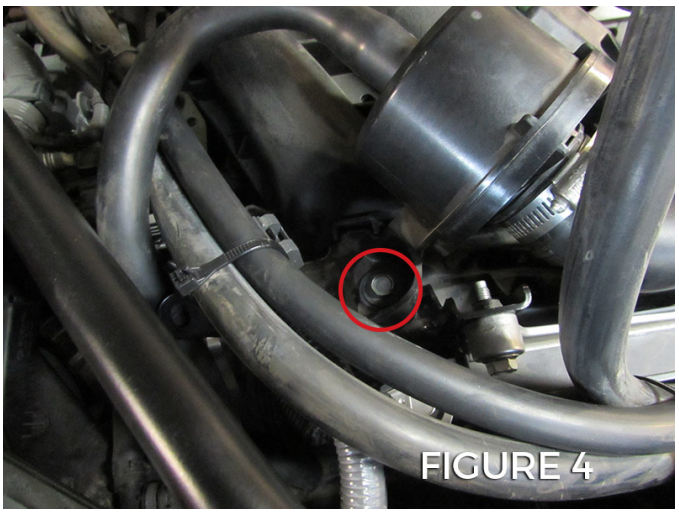

FIGURE 4

FIGURE 5

FIGURE 6

© 2016 Racer X Fabrication

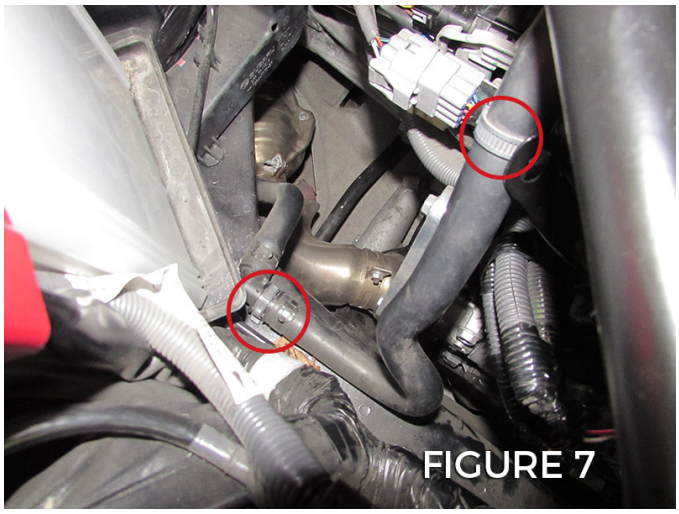

FIGURE 7

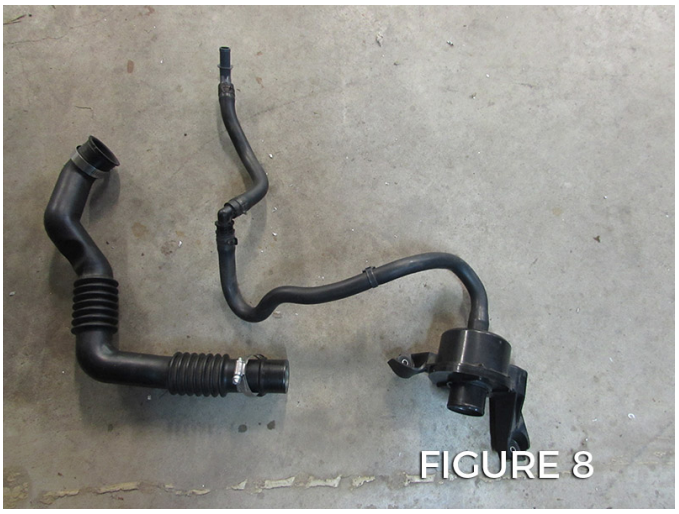

FIGURE 8

FIGURE 9

FIGURE 10

FIGURE 11

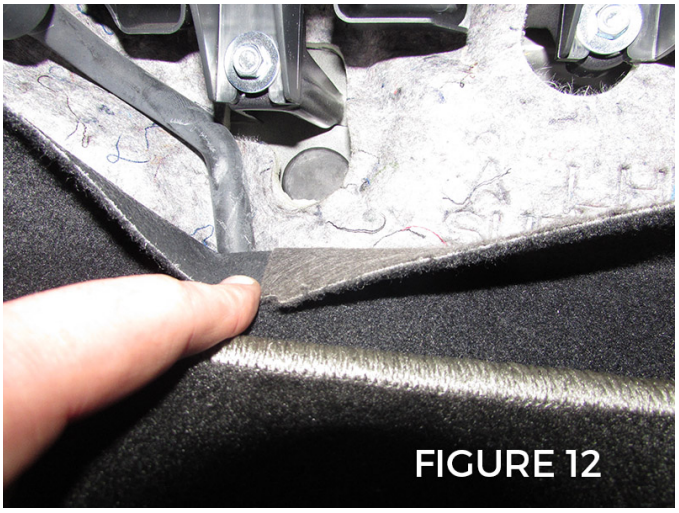

FIGURE 12

© 2016 Racer X Fabrication

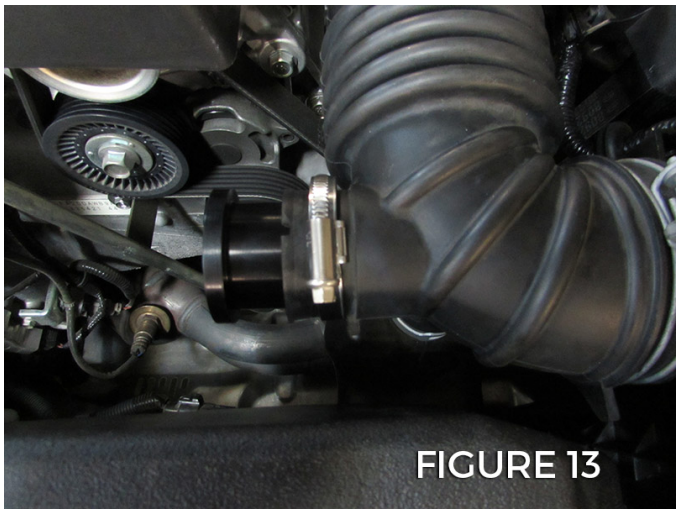

FIGURE 13

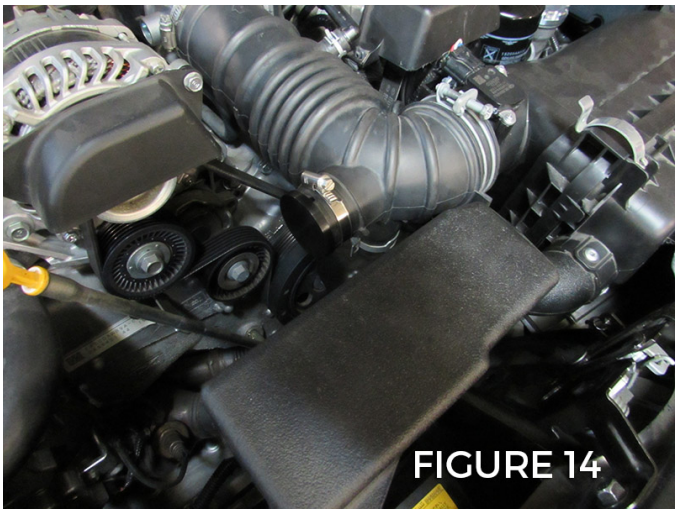

FIGURE 14

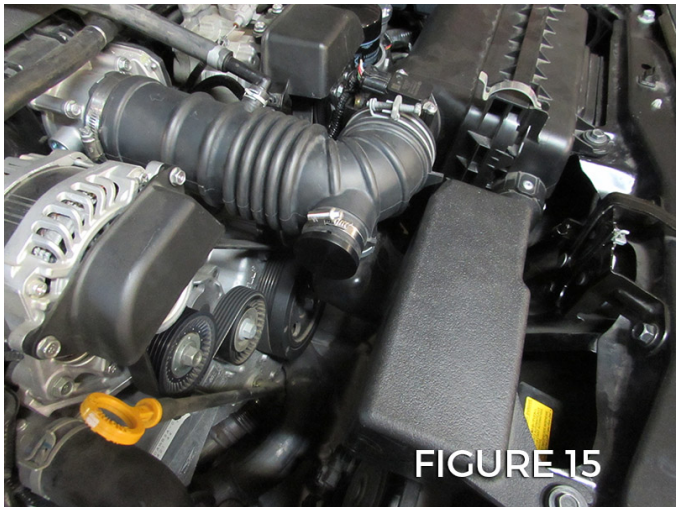

FIGURE 15

Questions, comments, or concerns? Email tech@racerxfabrication.com.

© 2016 Racer X Fabrication