




FR-S / BRZ / GT86 Front Lower Control Arms PROPER CAMBER ADJUSTMENT

- Disconnect front tie rods
- Leave caster arm disconnected until approximate camber is achieved
- Connect caster arm and adjust to final setting
- Connect front tie rods and adjust to final setting

Do NOT adjust camber arm with caster arm connecting as this can lead to binding and unnecessary high force at camber arm.

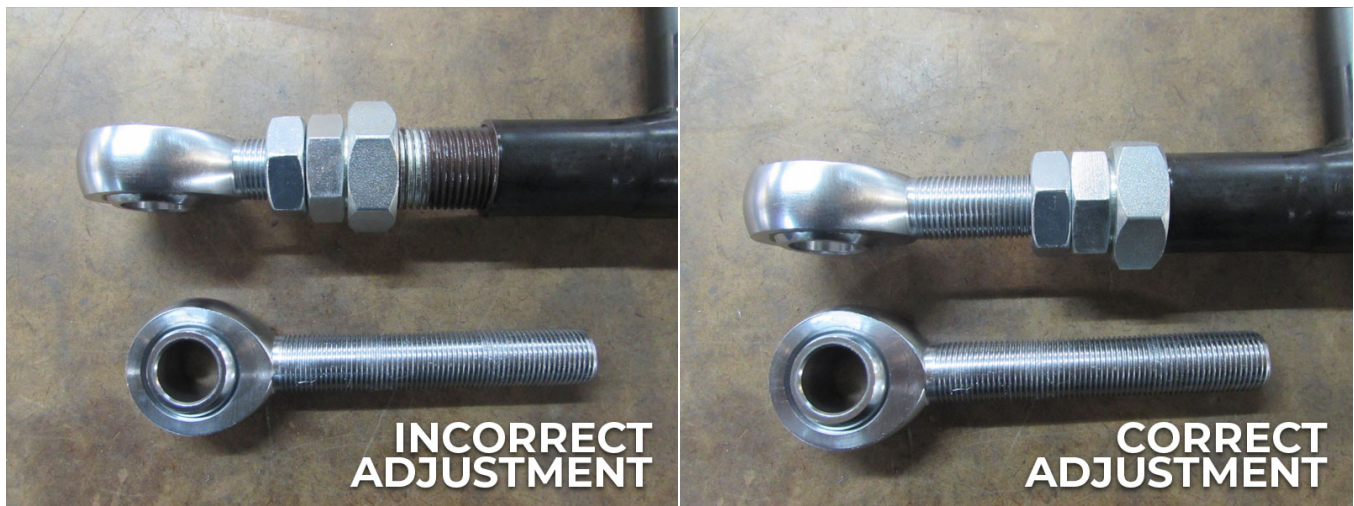

Questions, comments, or concerns? Email tech@racerxfabrication.com.