

INSTALL TIME: 1 hour

DIFFICULTY LEVEL: 3

TOOLS NEEDED: socket driver
9/16" socket
9/16" wrench
14 mm wrench
5 mm allen key



1. Start by safely lifting and supporting the vehicle. Once the front of the vehicle is supported, remove the wheels from both sides.

Locate OEM front end link and remove using a 14 mm wrench and 5 mm allen key. Remove both end links before installing the Racer X front end links. (Fig 1 and Fig 2)

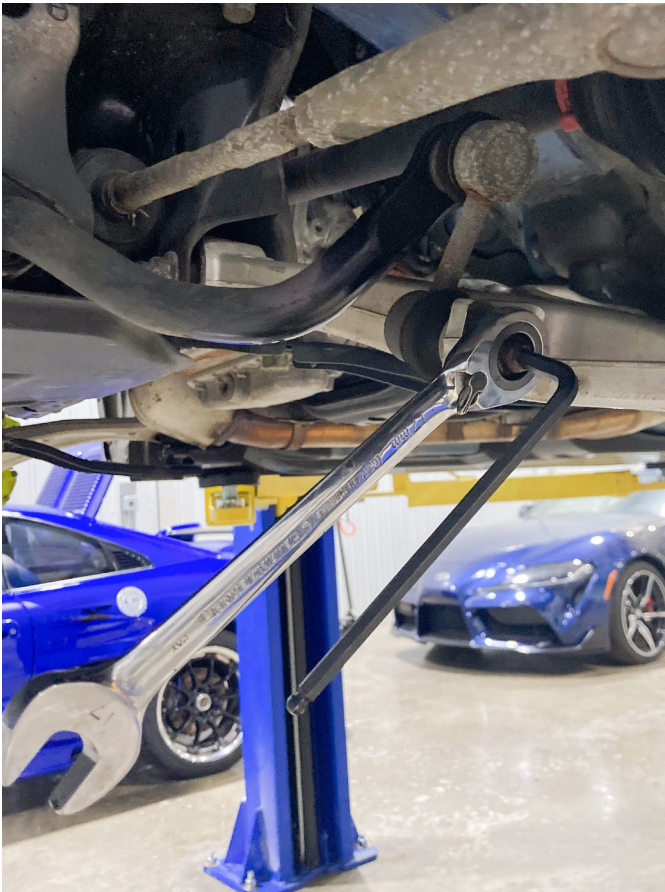


Figure 1



Figure 2

2. Insert bushing collars into the Racer X front end links and begin installation. Insert bolts through the end link and sway bar. Lock washers should go below bolt head, and flat washers will be used below lock nuts. Install both front end links before tightening bolts. (Fig 3)



Figure 3

3. Torque bolts to 34 ft/lbs using a 9/16" socket and 9/16" wrench.

Installation is complete. Re-install wheels and safely lower vehicle.(Fig 4)



Figure 4