

**INSTALL TIME:** 30 minutes - 1 hour

**DIFFICULTY LEVEL:** 2

**TOOLS NEEDED:** (2) 14 mm box wrench  
(or 14 mm box wrench and 9/16" box wrench)  
17 mm box wrench  
Needle nose pliers



1. Remove OEM clutch pedal clevis. Begin by removing cotter pin and pressing out clevis pin from clutch pedal.

At the rear of the clevis using (2) 14mm wrenches, loosen the jam nut. Thread off the OEM clutch pedal clevis by rotating the clutch cylinder rod. (Fig 1)



Figure 1

2. OEM Clutch pedal clevis removed. Thread on Racer X clutch pedal clevis. (Fig 2)



Figure 2



3. Install the bronze bushing and flat washer then slide the clevis over the bushing and washer.

Install the new clevis pin and finally install the cotter pin. (Fig 3)

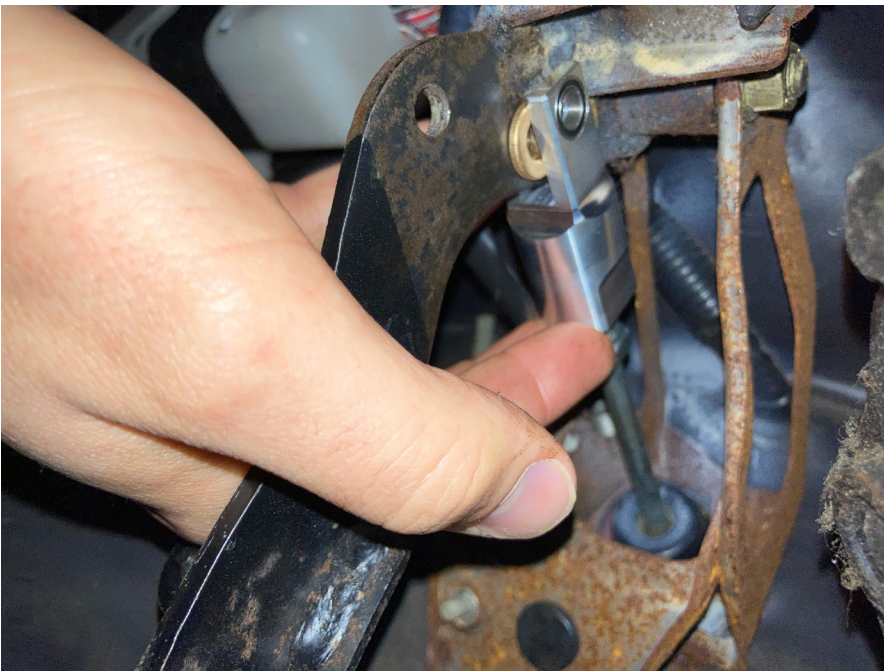


Figure 3

4. Adjust the clevis to the desired clutch pedal height and tighten the jam nut using a 17 mm wrench to hold the clevis and a 14 mm wrench for the jam nut.

Installation is complete! (Fig 4)



Figure 4